

## SUMMARY TABLE OF CONTROLS B3

		<i>Button</i>		on	on	▲	▲	▼	▼	⬆	⬆
		<i>Pressure</i>		Brief	Long	Brief	Long	Brief	Long	Brief	Long
<b>Basic Functions</b>	Turning on		X (2s)								
	Turning off		X (4s)								
	Increase Volume			X							
	Decrease Volume							X			
	Scroll menu (Base, Radio, Bike to Bike)		X (2s)								
<b>Bluetooth peripheral</b>	Answer phone call	X		X				X			
	Voice call		X (4s)								
	Hang up/reject a phone call		X (2s)								
	Redial last number									X	
	Mobile phone connection		X (4s)								
	Mobile phone disconnection										X (4s)
	Call transfer										X (4s)
	Activate Conference Mode	X									
<b>Base Menu</b>	Activate audio via cable					X (2s)					
	Deactivate audio via cable								X (2s)		
	Connect A2DP device					X (2s)					
	Disconnect A2DP device								(2s)		
	Play music (Play)					X (2s)					
	Pause Function (Pause)					X (2s)					
	Next track (Forward)					X (4s)					
	Activate N-Com intercom or Universal Intercom	X									
	Deactivate N-Com intercom or Universal Intercom	X									
<b>Radio menu</b>	Automatic search for new station					X (2s)					
	Change station (pre-set stations)								X (2s)		
	Pre-set station					X (4s)					
<b>Bike to Bike Menu</b>	Answer call Bike-to-Bike	X		X				X			
	Intercom swap (from Bike-to-Bike to Rider-Pillion Passenger)*	X		X							
	Connection to Bike 1					X (2s)					
	Connection to Bike 2								X (2s)		
	Connection to Bike 3					X (4s)					
	Connection to Bike 4								X (4s)		
<b>Setting</b>	Pairing up mode - system turned off		X (4s)								
	'Rider-Passenger' or 'Universal Intercom' intercom pair up	X									
	Bike 1 pair up					X (2s)					
	Bike 2 pair up								X (2s)		
	Bike 3 pair up					X (4s)					
	Bike 4 pair up								X (4s)		
	Bike-to-Bike menu enabling/disabling										X
	Erase pair ups**										X (4s)

\*Briefly press at the same time.

\*\*With N-Com system in Pairing up Mode.