SUMMARY TABLE OF CONTROLS N-COM MS

- Standard Configuration -

				N			•	
	Button	Ν	ON	+ ON	•	•	+ *	BACK
Basic Functions	Turning on							Х
	Turning off							2 sec
	Increase Volume				х			
	Decrease Volume					Х		
	Management of Lights Menu						2 sec	
	Answer phone call	Х	х		х	х		
	Voice call		2 sec					
	Redial last number			х				
Bluetooth Devices	Dial Friend Number	2 sec						
Dev	Hang up/reject a phone call		2 sec					
oth	Call transfer			2 sec				
etoc	Manual Device Connection		2 sec					
Blu	Manual Device Disconnection				4 sec			
	Turning on the Conference function	X						
	Turning off the Conference function	Х						
ç	Connection CHANNEL 1	Х						
Intercom	Disconnection of active intercom	Х						
Intel	Calling CHANNEL 2	x2						
	Calling CHANNEL 3	х3						
	Play music (Play)		Х					
1	Pause Function (Pause)		Х					
Bluetooth Music / Cable	Next track (Forward)				2 sec			
oth M Cable	Previous track (REW)					2 sec		
Coot	Enable A2DP profile		Х					
lue	Disable A2DP profile		4 sec					
	Activate audio via cable		x3					
	Deactivate audio via cable		x3					
	Turning on the Radio		x2					
enu	Turning off the Radio		x2					
N N	Automatic search for new station				2 sec			
Radio Menu	Change station (pre-set stations)					2 sec		
	Pre-set station					4 sec		
Setting*	Pairing up mode (system turned off)							4 sec
	Turning on/off the RDS					X		
	Turning on/off the Smart Navi System				2 sec			
	Pairing up secondary mobile phone (or device)		2 sec					
	Pairing up CHANNEL 1	Х						
	Pairing up CHANNEL 2	x2						
	Pairing up CHANNEL 3	x3						
	Pairing up CHANNEL 4**		X					
	Pairing up CHANNEL 5**		x2					
	Pairing up CHANNEL 6**		x3					
	Asociación Teclado wireless			10 sec				
	Reset						4 sec	

* All the Setting functions must be carried with the system in Setting Mode.

**With Friends Configuration active.

- Friends Configuration -

				N			•	
	Button	Ν	ON	+ ON	•	•	+ •	BACK
Basic Functions	Turning on							Х
	Turning off							2 sec
	Increase Volume				х			
	Decrease Volume					х		
	Management of Lights Menu						2 sec	
	Answer phone call	Х	Х		х	Х		
	Voice call		2 sec					
Bluetooth Devices	Redial last number			x				
	Dial Friend Number	4 sec						
	Hang up/reject a phone call		2 sec					
oth	Call transfer			2 sec				
ueto	Manual Device Connection		2 sec					
8	Manual Device Disconnection				4 sec			
	Turning on the Conference function	Х						
	Turning off the Conference function	Х						
	Connection CHANNEL 1	Х						
	Disconnection of active intercom	Х						
ε	Calling CHANNEL 2	x2						
Intercom	Calling CHANNEL 3	x3						
Inte	Calling CHANNEL 4		х					
	Calling CHANNEL 5		x2					
	Calling CHANNEL 6		x3					
	Play music (Play)			2 sec				
	Pause Function (Pause)			2 sec				
lusid	Next_track (Forward)				2 sec			
etooth Music / Cable	Enable A2DP profile			2 sec				
Üg	Disable A2DP profile					4 sec		
Blue	Activate audio via cable					2 sec		
	Deactivate audio via cable					2 sec		
	Turning on the Radio	2 sec						
2	Turning off the Radio	2 sec						
Mer	Automatic search for new station	2 300			2 sec			
Radio Menu	Change station				2 300	_		
Ra	(pre-set stations)					2 sec		
	Pre-set station					4 sec		
	Pairing up mode (system turned off)							4 sec
	Turning on/off the RDS					Х		
	Turning on/off the Smart Navi System				2 sec			
Setting*	Pairing up secondary mobile phone (or device)		2 sec					
	Pairing up CHANNEL 1	X						
	Pairing up CHANNEL 2	x2						
	Pairing up CHANNEL 3	x3						
	Pairing up CHANNEL 4**		X					
	Pairing up CHANNEL 5**		x2					
	Pairing up CHANNEL 6**		x3					
	Pairing up the wireless keypad			10 sec				
	Reset						4 sec	

* All the Setting functions must be carried with the system in Setting Mode. **With Friends Configuration active.